Canon

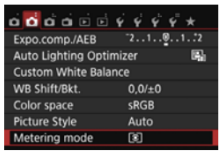

1 Select [Metering mode].

- Under the [📷2] tab, select [**Metering mode**], then press <(SET)>.



2 Set the metering mode.

- Select the desired metering mode, then press <(SET)>.

Nikon

To choose a metering method, rotate the metering selector until the desired setting is displayed in the viewfinder.

Metering selector

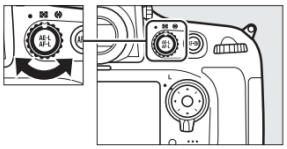

Viewfinder

Sony a7 Series

The status of the LCD screen is set to [Display All Info.] in the default settings.
When you change [DISP Button] setting, and then if you press DISP on the control wheel, the screen status will change to "For viewfinder" mode. You can also display the histogram by pressing DISP.

For the LCD screen mode

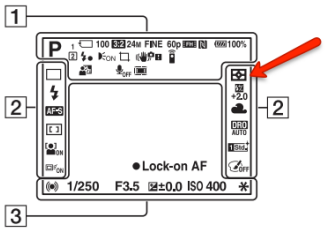

For playback (Basic information display)

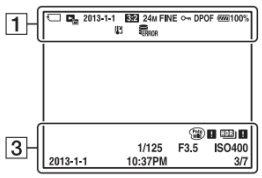

Fuji

Metering

To choose how the camera meters exposure, press the function button (**Fn1/AE**) to display metering options. Use the selector to highlight an option and press **MENU/OK** to select.

ⓘ The selected option will only take effect when Intelligent Face Detection is off (📖 88).



Olympus

Choosing how the camera measures brightness (metering)

Choose how the camera meters subject brightness.

1 Press the (OK) button and select metering.

2 Select an item using the front dial and press the (OK) button.

Sony Alpha

Metering Mode

Fn button → ▣ (Metering Mode) → Select the desired mode

Pentax

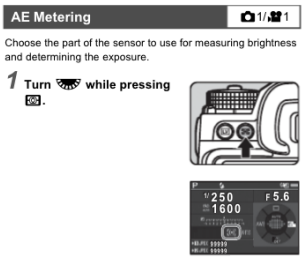

Panasonic GH Series

Selecting the Method for Measuring Brightness ([Metering Mode])

Applicable modes: P A S M C1 C2 C3

Type of optical measurement to measure brightness can be changed.

MENU → 📷[Rec] → [Metering Mode]

Samsung

To set a metering option,	In Shooting mode, press [▣] → an option.